



通过NEC适配器写原装钥匙

CG-MB



将新钥匙放入CG-MB设备孔中

奔驰怪兽 OAS 2 18 104

锁头 (EIS)

读写钥匙

计算密码

生成EE

汽车电脑

方向锁

钥匙基本信息

SSID	钥匙位置
E6 8D 3B 32	7
可用次数	状态
194194	激活钥匙
已使用次数	14EC 已使用
2413	版本
51	轨道码
复制 粘贴	复制

通讯方式:

红外

NEC适配器

读钥匙/芯片

复位/擦空

打开/写入

获取当前轨道码

保存 BE 钥匙文件

```
00000000 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000010 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000020 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000030 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000080 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000090 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

读取成功!

点击读取，显示相关钥匙信息



拆解钥匙，取出芯片，将其焊在NEC适配器上

- 锁头 (EIS)
- 读写钥匙**
- 计算密码
- 生成EE
- 汽车电脑
- 方向锁

钥匙基本信息

SSID	钥匙位置
E3 8D 3B 32	4
可用次数	状态 激活钥匙
196607	04 FC 已使用
已使用次数	版本
0	40
钥匙密码 复制 粘贴	轨道码 复制

通讯方式:

- 红外
- NFC话配器**

567897061芯片

- 读钥匙/芯片**
- 复位/擦空
- 打开/写入
- 获取当前轨道码
- 保存 BE 钥匙文件

00000000	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000040	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000050	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000060	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000070	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000080	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000090	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

读取成功!

读取钥匙，查看相关信息

- 锁头 (EIS)
- 读写钥匙
- 计算密码
- 生成EE
- 汽车电脑
- 方向锁

钥匙基本信息

SSID	钥匙位置
可用次数	状态 激活钥匙
已使用次数	
钥匙密码 复制	复制

00000000	00 00 00 00 00 00 00 00
00000010	00 00 00 00 00 00 00 00
00000020	00 00 00 00 00 00 00 00
00000030	00 00 00 00 00 00 00 00
00000040	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000050	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000060	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000070	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000080	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000090	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

通讯方式:

- 红外
- NEC适配器

567897061芯片

读钥匙/芯片

复位/擦空

打开/写入

获取当前轨道码

保存 BE 钥匙文件



复位操作成功!

复位擦空新钥匙

锁头 (EIS)

读写钥匙

计算密码

生成EE

汽车电脑

方向锁

钥匙基本信息

SSID

钥匙位置

可用次数

状态

激活钥匙

通讯方式:

- 红外
- NEC适配器

567897061芯片

读钥匙/芯片

复位/擦空

打开/写入

获取当前轨道码

保存 BE 钥匙文件

请注意

智能钥匙请选择 41 格式，普通钥匙和副厂钥匙请选择 51 格式！


写入原厂钥匙时，请确保是通过奔驰怪兽进行擦空，否则将写入失败！

确定

00000000	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000001	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000002	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000003	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000004	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000005	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000006	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000007	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000008	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000009	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

复位操作成功!

点击打开/写入，请注意提示

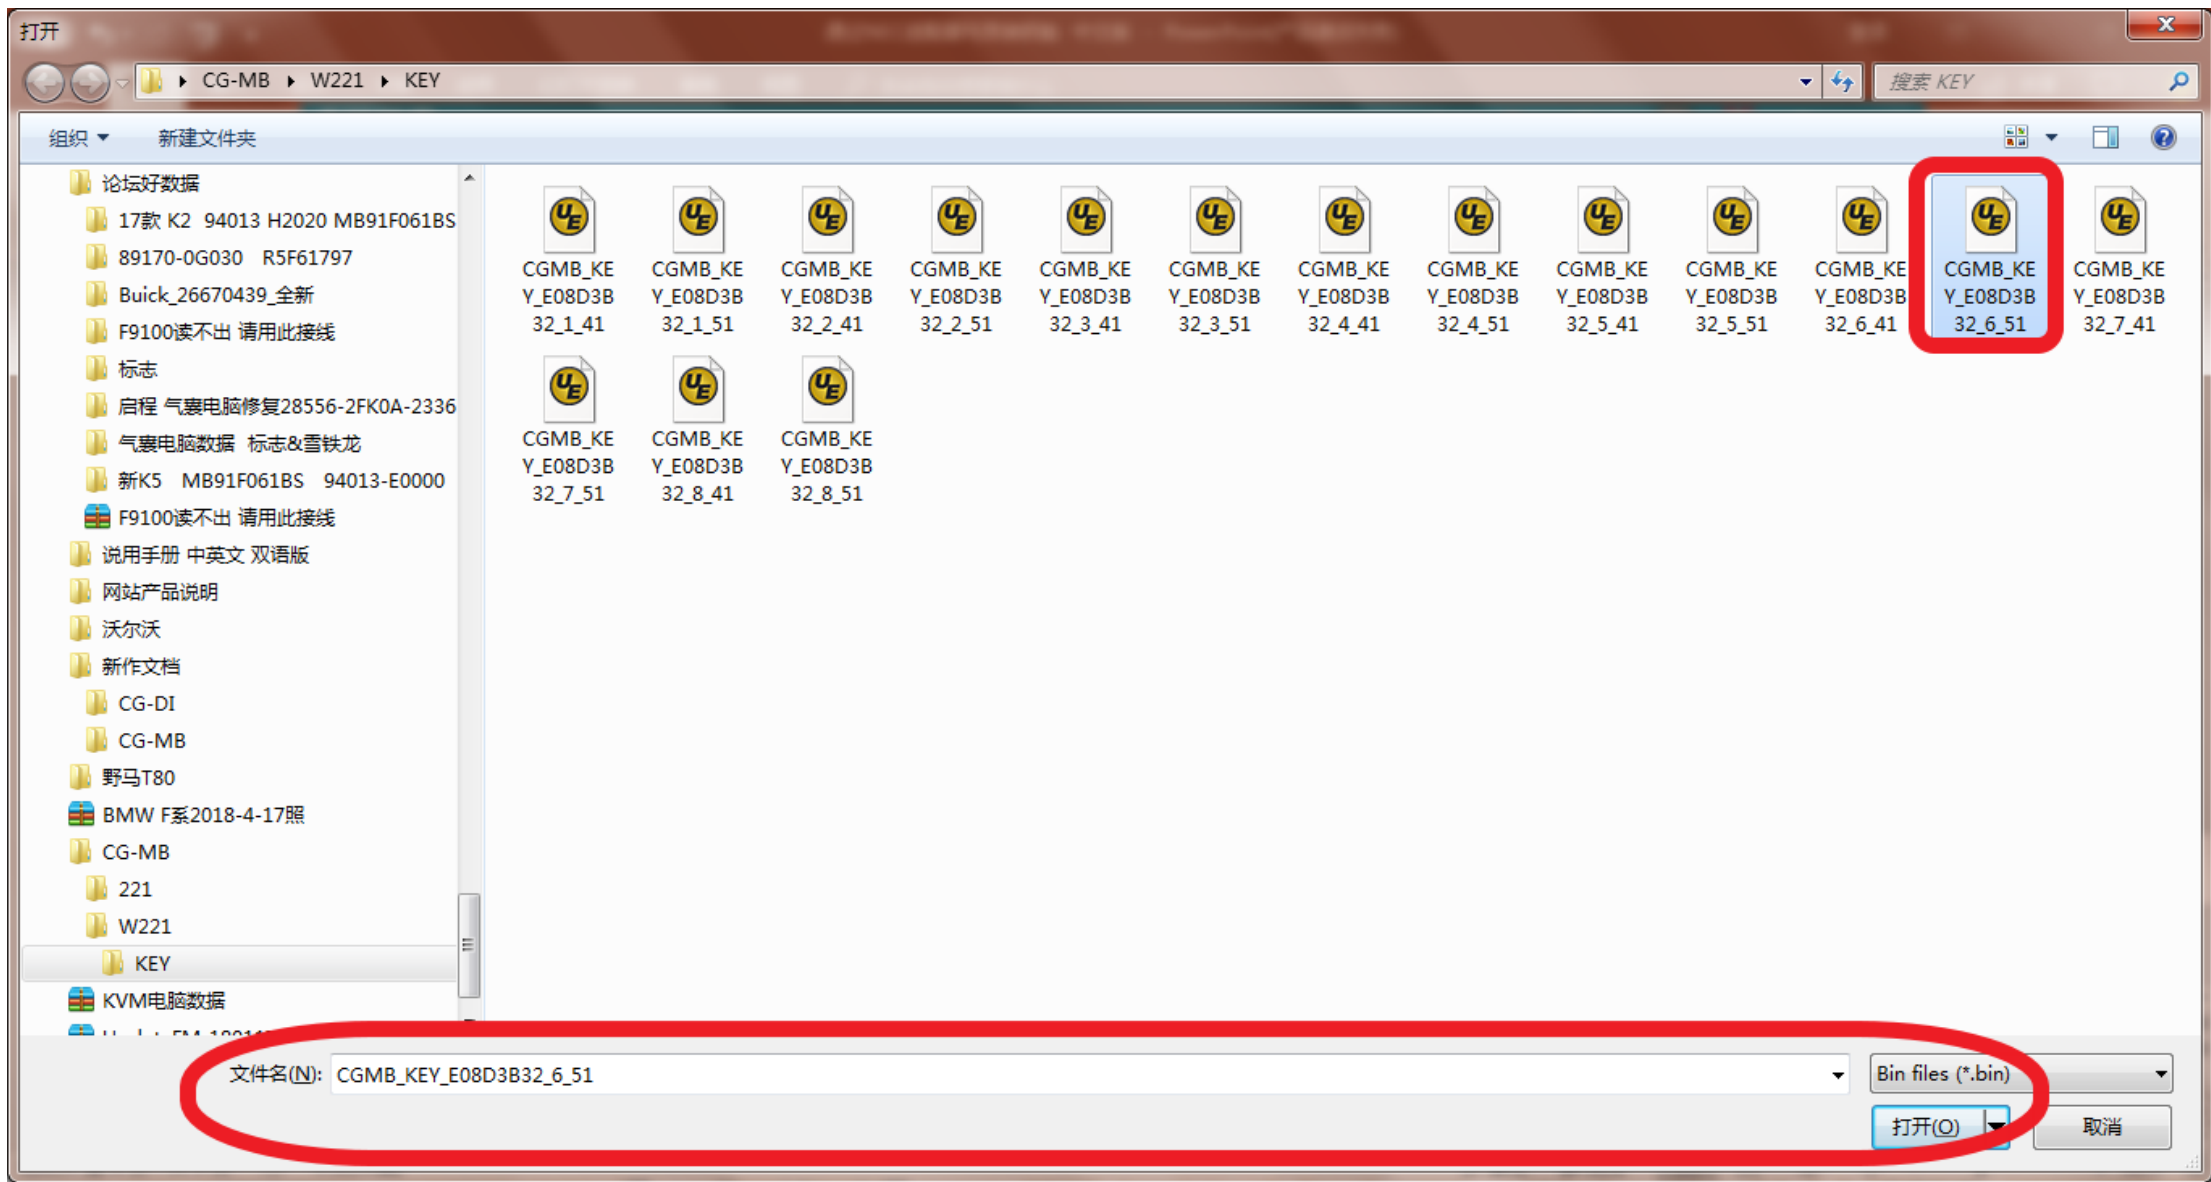

选择一未使用钥匙位数据，点击打开

- 锁头 (EIS)
- 读写钥匙
- 计算密码
- 生成EE
- 汽车电脑
- 方向锁

钥匙基本信息

SSID

钥匙位置

可用次数

状态

激活钥匙

已使用次数

版本

钥匙密码

复制

粘贴

复制

00000000	00 00 00 00 00 00	00 00
00000010	00 00 00 00 00 00	00 00
00000020	00 00 00 00 00 00	00 00
00000030	00 00 00 00 00 00	00 00
00000040	00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00
00000050	00 00 00 00 00 00	00
00000060	00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00
00000070	00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00
00000080	00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00
00000090	00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00

Benz Monster

写入成功!

确定

通讯方式:

- 红外
- NEC适配器

567897061芯片

- 读钥匙/芯片
- 复位/擦空
- 打开/写入
- 获取当前轨道码
- 保存 BE 钥匙文件

写入成功!

写入成功



将芯片取下NEC适配器，焊回钥匙，上车学习